

Simplicity Motorization

Setting and Using a Favorite Position

Step 1:

Using the up or down arrows put the shade in the desired position “favorite”

Step 2:

On the back of the remote press the **LIMIT** button and while holding the **LIMIT** button press and hold the **UP** button on the front of the remote until:

- **Honeycomb Shade** - the shade beeps.
- **Roller Shade, Window Shading, Dual Shade and Natural Woven Shade** – the shade jogs.

Note: The "Favorite" position can be changed by following steps 1 and 2.

To move a shade to the “Favorite” position:

- Ensure the shade is in a stopped position for at least 3 seconds.
- Press the **STOP** button on the front of the remote.

